

Disposal of Used Oil.....	214
Doors	
Locking and Unlocking.....	70
Power Door Locks.....	71
DOT Tire Quality Grading.....	296
Downshifting, 5-speed Manual	
Transmission.....	168
Drive Belts.....	234
Driving.....	163
Economy.....	157
In Bad Weather.....	180
In Foreign Countries.....	299
Driving Guidelines.....	164

E

Economy, Fuel.....	157
Emergencies on the Road.....	265
Battery, Jump Starting.....	276
Brake System Indicator.....	284
Changing a Flat Tire.....	266
Charging System Indicator.....	282
Checking the Fuses.....	286
Low Oil Pressure Indicator.....	281
Malfunction Indicator Lamp....	283
Overheated Engine.....	279

Emergency Brake.....	86
Emergency Flashers.....	63
Emergency Towing.....	290
Emission Controls.....	300
Engine	
Coolant Temperature Gauge.....	57
Malfunction Indicator	
Lamp.....	54, 282
Oil Pressure Indicator.....	54, 281
Oil, What Kind to Use.....	211
Overheating.....	279
Specifications.....	294
Starting.....	166
Ethanol in Gasoline.....	298
Evaporative Emission Controls....	300
Exhaust Fumes.....	49
Expectant Mothers, Use of Seat	
Belts by.....	19
Exterior, Cleaning the.....	256

F

Fabric, Cleaning.....	260
Fan, Interior.....	98
Features, Comfort and	
Convenience.....	97

Filling the Fuel Tank.....	157
Filters	
Air.....	226
Air Conditioning.....	234
Oil.....	213
5-speed Manual Transmission	
Checking Fluid Level.....	222
Shifting the.....	169
Flashers, Hazard Warning.....	63
Flat Tire, Changing a.....	213
Fluids	
Automatic Transmission.....	221
Brake.....	224
Clutch.....	224
Manual Transmission.....	222
Power Steering.....	225
Rear Differential.....	223
Windshield Washer.....	220
FM Stereo Radio	
Reception.....	125
Folding Rear Seat.....	82
Foreign Countries, Driving in.....	299
Four-way Flashers.....	63

CONTINUED