

Jack, Tire 266
Jump Starting 277

K

Keys..... 69

L

Label, Certification 292
Lane Change, Signaling 61
Lap Belt 43
Lap/Shoulder Belts 42
Lights
 Bulb Replacement 246
 Indicator 53
 Parking 60
 Turn Signal 61
LOCK (Ignition Key Position) 70
Locks
 Anti-theft Steering Column 70
 Fuel Fill Door 153
 Glove Box 77
 Power Door 71
 Tailgate 75
Low Coolant Level 156

Low Fuel Indicator 57
Low Oil Pressure Indicator 54, 281
Lubricant Specifications Chart 294

M

Maintenance 197
 Owner Maintenance Checks.... 209
 Record 207-208
 Required Indicator 58
 Safety 198
 Schedule 202-206
Malfunction Indicator Lamp .. 54, 281
Manual Transmission..... 168
Manual Transmission Fluid 222
Meters, Gauges..... 56
Methanol in Gasoline 282
Mirrors, Adjusting 86

N

Neutral Gear Position..... 172
New Vehicle Break-in 152
Normal Shift Speeds..... 169
NOTICE, Explanation of..... ii
Numbers, Identification 292

O

Octane Requirement, Gasoline 152
Odometer 56
Odometer, Trip 56
Off-Highway Guidelines 191
Oil
 Change, How to 213
 Change, When to 202
 Checking Engine 155
 Pressure Indicator 54, 281
 Selecting Proper Viscosity
 Chart 212
ON (Ignition Key Position) 70
Opening the Tailgate..... 75
Operation in Foreign Countries... 299
Outside Mirrors 86
Over-Drive 173
Overheating, Engine 279

P

Paint Touch-up 258
Panel Brightness Control 61

CONTINUED