

# Audio System

## CD Changer Error Indications

If you see an error indication in the display while operating the CD changer, find the cause in the chart to the right. If you cannot clear the error indication, take the vehicle to your Honda dealer.

Indication	Cause	Solution
Cd 0 <sup>DEC</sup> E-00	System Error FOCUS Error	Press the magazine eject button and pull out the magazine, check for error indication. Insert the magazine again. If the code does not disappear or the magazine cannot be pulled out, consult your Honda dealer.
Cd 0 <sup>DEC</sup> E-01	Mechanical Error	Press the magazine eject button and pull out the magazine, check for error indication. Insert the magazine again. If the code does not disappear or the magazine cannot be pulled out, consult your Honda dealer.
Cd 0 <sup>DEC</sup> E-02	Communication Error LSI Error	See your Honda dealer.
Cd 0 <sup>DEC</sup> ---H	High temperature.	Will disappear when the temperature returns to normal.
Cd 0 <sup>DEC</sup> ----	No CD magazine in the CD changer.	Insert CD magazine.
	No CD in the CD magazine.	Insert CD.