


# Seats

---


## Rear Seat-back Adjustment

*See pages 12 – 14 for important safety information and warnings about how to properly position seats and seat-backs.*

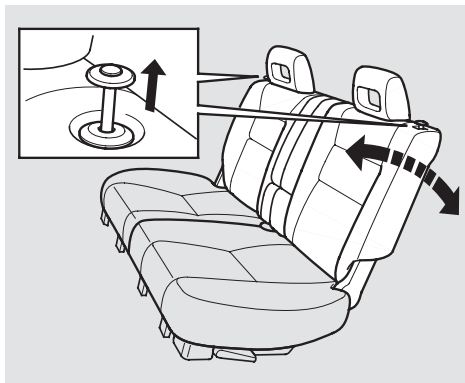

The angle of the rear seat-backs can be adjusted separately. To change the angle of the seat-back, pull up on the knob on the top of the seat-back. Move the seat-back to the desired position, then release the knob. Make sure the seat-back latches in the new position.

## Rear Seat Armrest

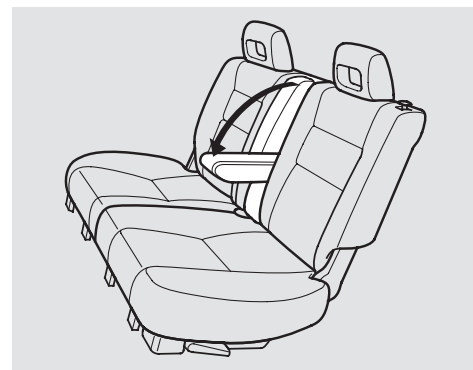

The rear seat armrests are located at the center of the rear seat. Pivot them down to use them.