


Cooling System

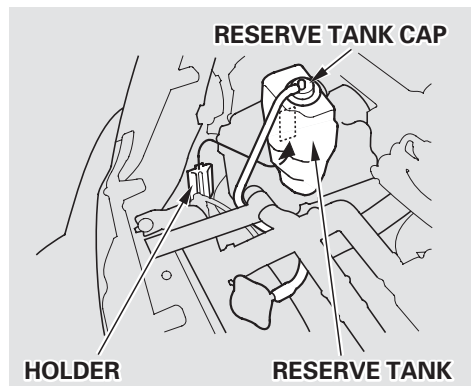

5. Remove the reserve tank from its holder by pulling it straight up. Drain the coolant, then put the tank back in its holder.

6. When the coolant stops draining, tighten the drain plug at the bottom of the radiator. Apply non-hardening sealant to the drain bolt threads, put a new washer on the drain bolt, and reinstall the bolt in the engine block. Tighten it securely. Tightening torque:
61 lbf·ft (83 N·m , 8.5 kgf·m)


7. Mix the recommended antifreeze with an equal amount of purified or distilled water in a clean container. The cooling system capacity is:

Automatic Transmission:

1.03 US gal (3.9 ℓ , 0.86 Imp gal)

Manual Transmission:

1.06 US gal (4.0 ℓ , 0.88 Imp gal)

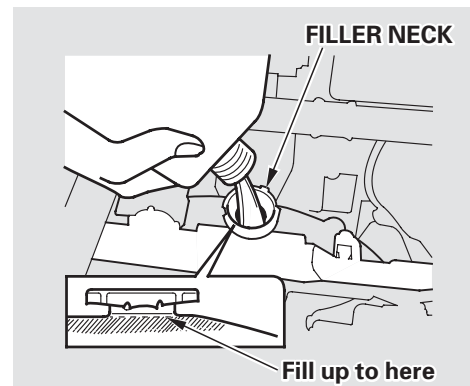

8. Pour coolant into the radiator up to the base of the filler neck.