


Air Cleaner Element

The air cleaner element should be replaced according to the time and distance recommendations in the maintenance schedule.


Replacement

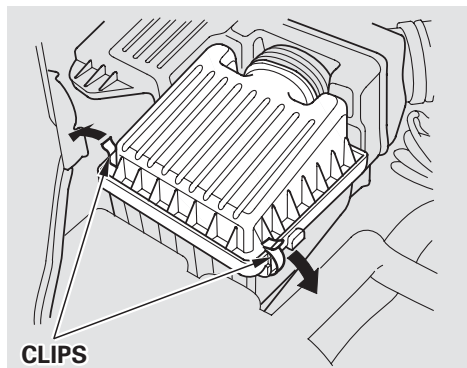

The air cleaner element is inside the air cleaner housing on the right side of the engine compartment.

To replace it:

1. Unsnap the two clips and remove the air cleaner housing cover.

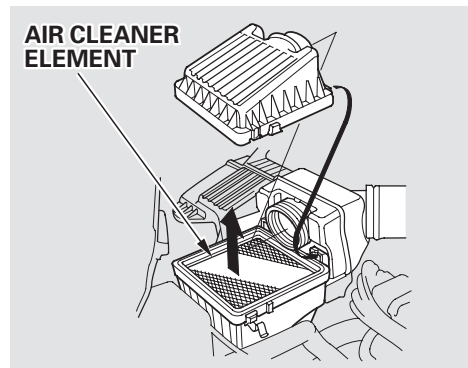

2. Remove the old air cleaner element.
Carefully clean the inside of the air cleaner housing with a damp rag.
3. Place the new air cleaner element in the air cleaner housing.
4. Align the tabs and reinstall the air cleaner housing cover, snap the two clips back into place.