

# Lights

---


## Headlight Aiming

The headlights were properly aimed when your vehicle was new. If you regularly carry heavy items in the cargo area or pull a trailer, readjustment may be required. Adjustment of the headlights should be performed by a Honda technician or other qualified mechanic.

To check these settings:

1. Make sure the fuel tank is full.  
Park the vehicle on level ground.
2. The driver or someone who weighs the same should be sitting in the driver's seat for all checks and adjustments.  
Load your vehicle with the items you normally carry.

### HORIZONTAL ANGLE GAUGE

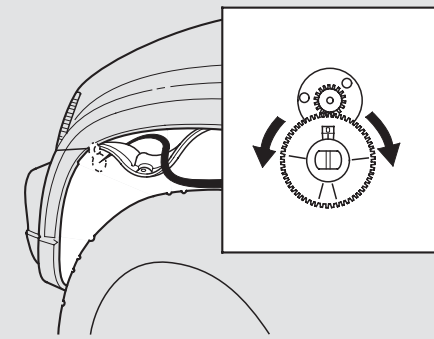

3. Open the hood.
4. Pull the inner fender off (see page 247).
5. Check the horizontal angle gauge.  
The line on the adjustment screw indicator should line up with the "0" mark on the gauge.