

| | | | | | | | | | |
|--|---|----|----|----|----|-----|-----|-----|-----|
| Service at the indicated distance or time — whichever comes first. | miles x 1,000 | 15 | 30 | 45 | 60 | 75 | 90 | 105 | 120 |
| | km x 1,000 | 24 | 48 | 72 | 96 | 120 | 144 | 168 | 192 |
| | months | 12 | 24 | 36 | 48 | 60 | 72 | 84 | 96 |
| Replace engine oil | Every 7,500 miles (12,000 km) or 12 months | | | | | | | | |
| Replace engine oil filter | ● | ● | ● | ● | ● | ● | ● | ● | ● |
| Check engine oil and coolant | Check oil and coolant at each fuel stop | | | | | | | | |
| Replace air cleaner element | | ● | | ● | | ● | | | ● |
| Inspect valve clearance | Adjust only if noisy | | | | | | | ● | |
| Replace spark plugs | | ● | | ● | | ● | | | ● |
| Replace timing belt*,*1, and inspect water pump | | | | | | | ● | | |
| Inspect and adjust drive belts | | ● | | ● | | ● | | | ● |
| Inspect idle speed# | | | | | | | | ● | |
| Replace engine coolant | At 120,000 miles (192,000 km) or 120 months, then every 60,000 miles (96,000 km) or 60 months | | | | | | | | |
| Replace transmission fluid | MT | | | | | | | | ●*2 |
| | AT | | | | | | | | ●*3 |
| Replace rear differential fluid | | | | | | | ● | | |
| Inspect front and rear brakes | ● | ● | ● | ● | ● | ● | ● | ● | ● |
| Replace brake fluid | Every 36 months (independent of mileage) | | | | | | | | |
| Check parking brake adjustment | ● | ● | ● | ● | ● | ● | ● | ● | ● |
| Replace air conditioning filter | | ● | | ● | | ● | | | ● |
| Rotate tires (Check tire inflation and condition at least once per month) | Rotate tires every 7,500 miles (12,000 km) | | | | | | | | |
| Visually inspect the following items: | | | | | | | | | |
| Tie rod ends, steering gear box, and boots | ● | ● | ● | ● | ● | ● | ● | ● | ● |
| Suspension components | | | | | | | | | |
| Driveshaft boots | | | | | | | | | |
| Brake hoses and lines (including ABS) | | | | | | | | | |
| All fluid levels and condition of fluids | | | | | | | | | |
| Cooling system hoses and connections | | | | | | | | | |
| Exhaust system# | | | | | | | | | |
| Fuel lines and connections# | | | | | | | | | |

U.S. Owners
Follow the Normal Conditions Maintenance Schedule if the severe driving conditions specified in the Severe Conditions Maintenance Schedule do not apply.

NOTE: If you only *OCCASIONALLY* drive under a “severe” condition, you should follow the Normal Conditions Maintenance Schedule.

Canadian Owners
Follow the Maintenance Schedule for Severe Conditions.

- # : See information on maintenance and emissions warranty, last column, page 201.
- * 1 : See timing belt on page 231 to determine need for replacement.
- * 2 : Replace every 120,000 miles (192,000 km) or 72 months
- * 3 : Replace at 120,000 miles (192,000 km) or 72 months, then every 90,000 miles (144,000 km) or 60 months