

Service at the indicated distance or time — whichever comes first.	miles x 1,000	15	30	45	60	75	90	105	120
	km x 1,000	24	48	72	96	120	144	168	192
	months	12	24	36	48	60	72	84	96
Replace engine oil and oil filter	Every 3,750 miles (6,000 km) or 6 months								
Check engine oil and coolant	Check oil and coolant at each fuel stop								
Replace air cleaner element	●	●	●	●	●	●	●	●	●
Inspect valve clearance	Adjust only if noisy							●	●
Replace spark plugs		●		●		●		●	●
Replace timing belt ^{*,*1} and inspect water pump								●	
Inspect and adjust drive belts		●		●		●		●	●
Inspect idle speed [‡]								●	
Replace engine coolant	At 120,000 miles (192,000 km) or 120 months, then every 60,000 miles (96,000 km) or 60 months								
Replace transmission fluid	MT			● ^{*3}					●
	AT			● ^{*4}		●			●
Replace rear differential fluid				●					●
Inspect front and rear brakes	Every 7,500 miles (12,000 km) or 6 months								
Replace brake fluid	Every 36 months (independent of mileage)								
Check parking brake adjustment	●	●	●	●	●	●	●	●	●
Replace air conditioning filter ^{*2}		●		●		●		●	●
Clean antenna mast	●	●	●	●	●	●	●	●	●
Lubricate all door hinges, locks and latches, including the hood	●	●	●	●	●	●	●	●	●
Rotate tires (Check tire inflation and condition at least once per month)	Rotate tires every 7,500 miles (12,000 km)								
Visually inspect the following items:									
Tie rod ends, steering gear box, and boots	Every 7,500 miles (12,000 km) or 6 months								
Suspension components, Driveshaft boots									
Brake hoses and lines (including ABS)									
All fluid levels and condition of fluids									
Cooling system hoses and connections	●	●	●	●	●	●	●	●	●
Exhaust system [‡] /Fuel lines and connections [‡]									
Lights and controls/Vehicle underbody									

: See information on maintenance and emissions warranty, last column, page 201.

*1 : Refer to page 235 for replacement information under special driving conditions.

*2 : Refer to page 234 for replacement information under special driving conditions.

*3 : Replace every 60,000 miles (96,000 km) or 36 months.

*4 : Replace at 60,000 miles (96,000 km) or 36 months, then every 30,000 miles (48,000 km) or 24 months.

U.S. Owners

Follow the Severe Conditions Maintenance Schedule if you drive your vehicle *MAINLY* under one or more of the following conditions:

- Driving less than 5 miles (8 km) per trip or, in freezing temperatures, driving less than 10 miles (16 km) per trip.
- Driving in extremely hot [over 90°F (32°C)] conditions.
- Extensive idling or long periods of stop-and-go driving.
- Trailer towing, driving with a roof rack, or driving in mountainous conditions.
- Driving on muddy, dusty, or de-iced roads.

Canadian Owners

Follow the Maintenance Schedule for Severe Conditions.