

56,250 mi/90,000 km/-	Do items in A.
60,000 mi/96,000 km/4 yrs	<input type="checkbox"/> Replace rear differential fluid. Do items in A, B, C, D.
63,750 mi/102,000 km/-	Do items in A.
67,500 mi/108,000 km/4½ yrs	Do items in A, B.
71,250 mi/114,000 km/-	Do items in A.
75,000 mi/120,000 km/5 yrs	Do items in A, B, C.
78,750 mi/126,000 km/-	Do items in A.
82,500 mi/132,000 km/5½ yrs	Do items in A, B.
86,250 mi/138,000 km/-	Do items in A.
90,000 mi/144,000 km/6 yrs	<input type="checkbox"/> Replace brake fluid. Do items in A, B, C, D.
93,750 mi/150,000 km/-	Do items in A.
97,500 mi/156,000 km/6½ yrs	Do items in A, B.
101,250 mi/162,000 km/-	Do items in A.
105,000 mi/168,000 km/7 yrs	<input type="checkbox"/> Replace timing belt <sup>#, *1</sup> , inspect water pump. <input type="checkbox"/> Inspect valve clearance. <input type="checkbox"/> Check idle speed <sup>#</sup> . Do items in A, B, C.
108,750 mi/174,000 km/-	Do items in A.
112,500 mi/180,000 km/7½ yrs	Do items in A, B.
116,250 mi/186,000 km/-	Do items in A.
120,000 mi/192,000 km/8 yrs	<input type="checkbox"/> Replace rear differential fluid. Do items in A, B, C.
At 120,000 mi/192,000 km/120 months, thereafter every 60,000 mi/96,000 km/60 months	<input type="checkbox"/> Replace engine coolant
Every 60,000 mi/96,000 km/48 months	<input type="checkbox"/> Replace manual transmission fluid
At 60,000 miles/96,000 km or 48 months, thereafter every 30,000 mi/48,000 km/24 months	<input type="checkbox"/> Replace automatic transmission fluid

- D** ☐ Replace spark plugs.  
☐ Inspect and adjust drive belts.  
☐ Replace air conditioning filter.<sup>\*2</sup>

**E** ☐ Replace brake fluid every 3 years (independent of mileage).

- # : See information on maintenance and emissions warranty, last column, page 201.  
\* 1 : See timing belt on page 235 to determine need for replacement.  
\* 2 : See Air Conditioning Filter on page 234 for replacement information under special driving conditions.  
\* : Check oil and coolant at each fuel stop.  
\* : Check and adjust valve clearance, cold engine, only if noisy.