

You should check the following items at the specified intervals. If you are unsure of how to perform any check, turn to the page given.

- Engine oil level — Check every time you fill the fuel tank. See page 155 .
- Engine coolant level — Check the radiator reserve tank every time you fill the fuel tank. See page 156 .
- Windshield washer fluid — Check the level in the reservoir monthly. If weather conditions cause you to use the washers frequently, check the reservoir each time you stop for fuel. See page 220 .
- Automatic transmission — Check the fluid level monthly. See page 221 .
- Brakes and clutch — Check the fluid level monthly. See page 224 .
- Tires — Check the tire pressure monthly. Examine the tread for wear and foreign objects. See page 235 .
- Lights — Check the operation of the headlights, parking lights, taillights, high-mount brake light, turn signals, brake lights, and license plate lights monthly. See page 242 .