



Changing a Flat Tire

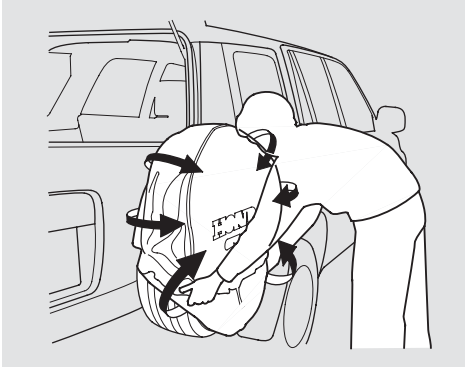


8. Pull out the cover's two lower flaps. Don't pull the top of the cover, or you will tear it.
9. Pull the upper flaps out by gradually working your hands up the sides of the cover.
10. Remove the cover.

Hard type spare tire cover On SE model

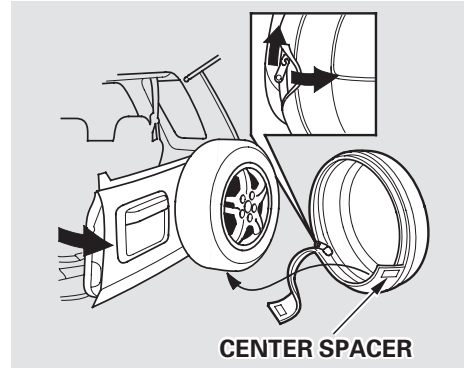

11. Unfasten the magic tape on the left side.
12. Unzip the cover around the upper edge of the cover.
13. Pull out the upper edge of the cover gradually.

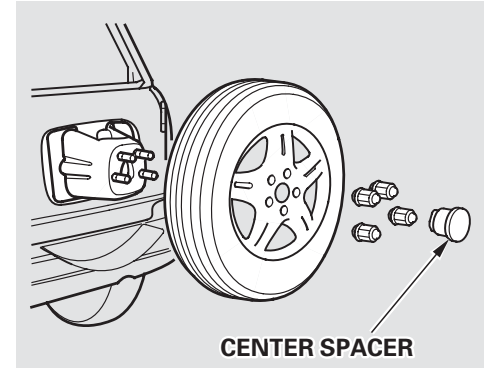

14. Peel off the spare tire cover from the back of the spare tire and remove the cover. Do not forcibly pull off the cover or you may damage it.
15. Pull off the center spacer. Using the wheel wrench, remove the three wheel nuts. Remove the spare tire from the holder.