





28. Unhook the cargo area floor and lower it. Replace the cargo area carpet.

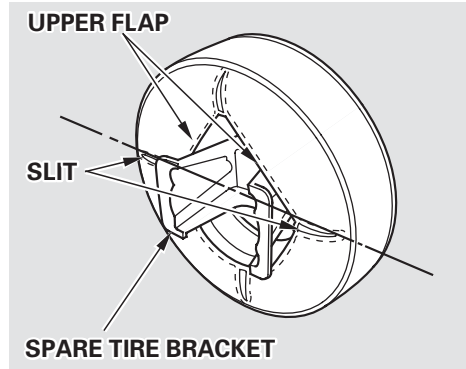

29. Pull the bottom of the cover over the tire, and make sure the two slits on the lower flaps of the cover are horizontal and the two upper flaps touch the spare tire bracket.

30. If needed, readjust the cover to smooth out any wrinkles.

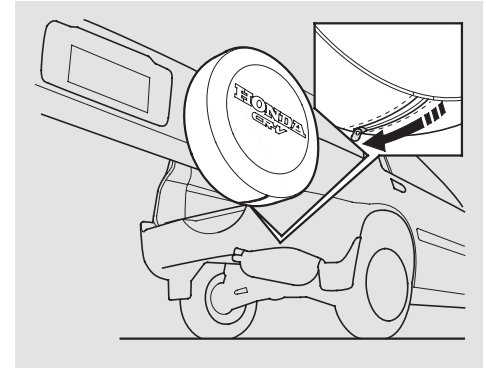

31. Zip the cover closed.

*CONTINUED*