

This section covers the more-common problems that motorists experience with their vehicles. It gives you information about how to safely evaluate the problem and what to do to correct it. If the problem has stranded you on the side of the road, you may be able to get going again. If not, you will also find instructions on getting your vehicle towed.

Changing a Flat Tire	266
If Your Engine Won't Start.....	275
Nothing Happens or the Starter Motor Operates Very Slowly	275
The Starter Operates Normally	276
Jump Starting	277
If Your Engine Overheats.....	279
Low Oil Pressure Indicator	281
Charging System Indicator.....	282
Malfunction Indicator Lamp	283
Brake System Indicator	284
Fuses	285
Checking and Replacing	286
Emergency Towing	290