

The Engine Number is stamped into the engine block.

The Transmission Number is on a label on top of the transmission.

