

Index

SRS, Additional Information.....	54
Additional Safety Precautions....	59
Airbag Service	59
How the Side Airbag Cutoff Indicator Light Works	58
How the SRS Indicator Works...	57
How Your Front Airbags Work.....	54
How Your Side Airbags Work....	56
SRS Components	54
SRS Indicator.....	57, 67
START (Ignition Key Position)	87
State Emissions Testing	351
Starting the Engine.....	200
In Cold Weather at High Altitude	201
With a Dead Battery	320
Steam Coming from Engine.....	323
Steering Wheel	
Adjustment	83
Anti-theft Column Lock	87
Stereo Sound System	137
Storage Box	119
Storing Your Vehicle	295
Sunglasses Holder	121

Supplemental Restraint System.....	10, 54
Servicing	59
SRS Indicator.....	57, 67
System Components.....	54
Synthetic Oil.....	248

T

Tachometer	72
Tailgate	
Hatch Glass	94
Open Indicator	70
Opening the	93
Taillights, Changing Bulbs.....	290
Taking Care of the Unexpected ..	307
Tape Player	151, 164
Technical Descriptions	
DOT Tire Quality Grading	344
Emissions Control Systems.....	348
Oxygenated Fuels.....	346
Three Way Catalytic Converter.....	350
Temperature Gauge	74
Tether Anchorage Points	46
Theft Protection.....	178

Three Way Catalytic Converter...	350
Time, Setting the	144, 162
Tire Chains.....	284
Tire, How to Change a Flat	308
Tires	278
Air Pressure	279
Checking Wear	280
DOT Tire Quality Grading	344
Inflation.....	278
Inspection	280
Maintenance.....	280
Replacing	282
Rotating.....	281
Snow	283
Specifications	343
Tire Chains.....	284
Tools, Tire Changing	308
Towing	
A Trailer.....	217
Behind a Motorhome	224
Emergency	337