

**DRL**

### **“Daytime Running Lights” Indicator**

*Canadian models only*

This indicator lights when you turn the ignition switch to ON (II) with the headlight switch off and the parking brake set. It should go off if you turn on the headlights or release the parking brake. If it comes on at any other time, it means there is a problem with the DRL. There may also be a problem with the high beam headlights.

**CRUISE  
CONTROL**

### **Cruise Control Indicator**

This lights when you set the cruise control. See page 179 for information on operating the cruise control.



### **High Beam Indicator**

This light comes on with the high beam headlights. See page 76 for information on the headlight controls.

On Canadian models, this indicator comes on with reduced brightness when the Daytime Running Lights (DRL) are on (see page 77).



### **Low Fuel Indicator**

This light comes on as a reminder that you must refuel soon.



### **Washer Level Indicator**

*Canadian models only*

This light comes on when the washer fluid level is low. Add washer fluid when you see this light come on (see page 258 ).