

## Indicator Lights

---



### **Tailgate and Hatch Glass Open Indicator**

This light comes on if the tailgate or the hatch glass is not closed tightly.



### **Door-open Indicator**

This light comes on if any door is not closed tightly.



### **Maintenance Required Indicator**

This indicator reminds you that it is time to take your vehicle in for scheduled maintenance.

Refer to the Maintenance Schedules for Normal and Severe Driving Conditions on pages 238 — 242 .

For the first 8,000 miles (12,800 km) after the Maintenance Required Indicator is reset, it will come on for two seconds when you turn the ignition switch ON (II).

Between 8,000 miles (12,800 km) and 10,000 miles (16,000 km) this indicator will light for two seconds when you first turn the ignition switch ON (II), and then flash for ten seconds.

If you exceed 10,000 miles (16,000 km) without having the scheduled maintenance performed, this indicator will remain on as a constant reminder.