


When using the center seating position, adjust the left and right side of the rear seats to the same position.

Make sure all rear shoulder belts are positioned in front of the rear seat-backs after you adjust the rear seats.

Rear Seat Armrest

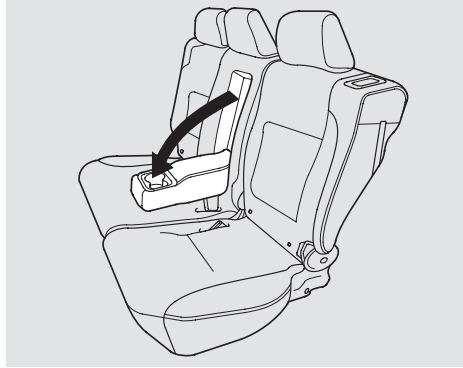

The rear seat armrest is located in the center of the rear seat. Pivot it down to use it.