

## Changing a Flat Tire

7. Remove the spare tire cover. Do not forcibly pull off the cover or you may damage it.

*On LX and EX models in the U.S. and Canada*


Your vehicle is equipped with a soft vinyl spare tire cover. The following shows you how to remove the cover.

*On EX-L model in Canada*

Your vehicle is equipped with a hard plastic spare tire cover. See page 311 for how to remove the cover.

### ***Soft vinyl spare tire cover***

*On LX and EX models in the U.S. and Canada*

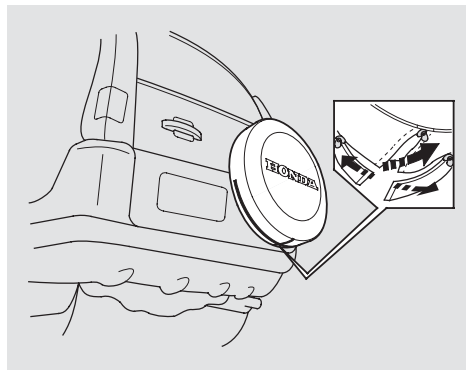

8. Zip open the cover.



9. Pull out the cover's two lower flaps. Don't pull the top of the cover, or you will tear it.
10. Pull the upper flaps out by gradually working your hands up the sides of the cover.
11. Remove the cover.