



Changing a Flat Tire

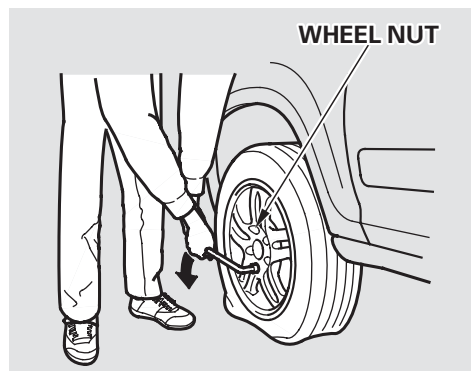

15. Loosen the five wheel nuts 1/2 turn with the wheel wrench.

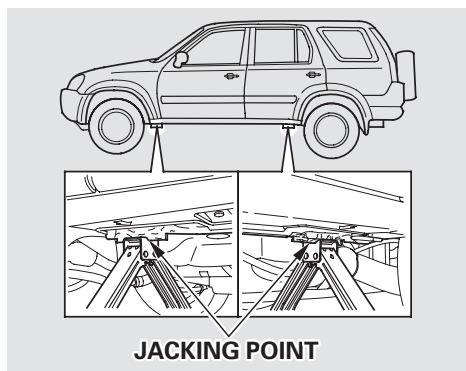

16. Locate the jacking point nearest the tire you need to change. It is pointed to by an arrow molded into the underside of the body. Place the jack under the jacking point. Turn the end bracket clockwise until the top of the jack contacts the jacking point. Make sure the center of the jacking point tab is resting in the jack notch.



17. Use the extension and wheel wrench as shown to raise the vehicle until the flat tire is off the ground.