

This section covers the more-common problems that motorists experience with their vehicles. It gives you information about how to safely evaluate the problem and what to do to correct it. If the problem has stranded you on the side of the road, you may be able to get going again. If not, you will also find instructions on getting your vehicle towed.

Changing a Flat Tire	308
If Your Engine Won't Start.....	318
Nothing Happens or the Starter Motor Operates Very Slowly	318
The Starter Operates Normally	319
Jump Starting	320
If Your Engine Overheats.....	323
Low Oil Pressure Indicator	325
Charging System Indicator.....	326
Malfunction Indicator Lamp	327
Readiness Codes.....	328
Brake System Indicator	329
Closing the Moonroof	330
Fuses	331
Checking and Replacing	332
Emergency Towing	337