


# Seats

---

## Driver's Seat Height Adjustment

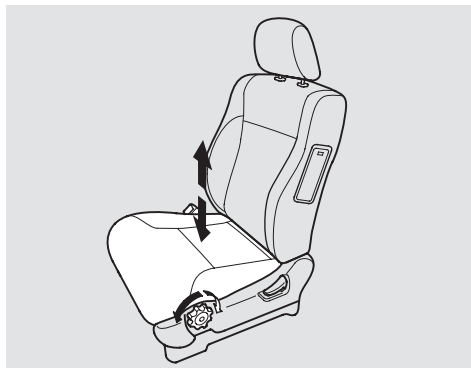

To adjust the height of the driver's seat, turn the dial on the outside of the seat bottom.

## Front Seat Armrests



*Only on vehicles with an automatic transmission*

Each front seat has an armrest on the side of the seat-back. To use it, pivot it down.