


4. Remove the dipstick again and check the level. It should be between the upper and lower marks.

If it is near or below the lower mark, see **Adding Oil** on page 247 .

### *Engine Coolant Check*

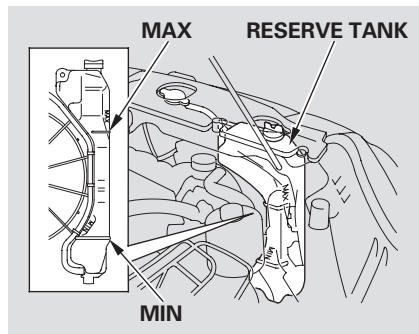

Look at the coolant level in the radiator reserve tank. Make sure it is between the MAX and MIN lines. If it is below the MIN line, see **Adding Engine Coolant** on page 251 for information on adding the proper coolant.

Refer to **Owner Maintenance Checks** on page 245 for information on checking other items in your Honda.