

Audio System

CD Changer Error Indications

If you see an error indication in the display while operating the optional CD changer, find the cause in the chart to the right. If you cannot clear the error indication, take the vehicle to your Honda dealer.

Indication	Cause	Solution
CD EJECT	Disc-changer malfunction	Consult your Honda dealer.
CD EJECT	Disc is in changer mechanism	Press the magazine eject button, and insert an empty magazine.
CD - - H	High temperature	Will disappear when the temperature returns to normal.
CD EEE	Misconnection or disconnection of CD changer	See your Honda dealer.
CD - - -	No CD magazine in the CD changer	Insert CD magazine.
CD DISC	No CD in magazine	Insert CD in magazine.