

Dipstick	
Automatic Transmission.....	260
Engine Oil.....	188
Directional Signals.....	77
Disc Brake Wear Indicators.....	211
Disposal of Used Oil.....	250
Doors	
Locking and Unlocking.....	88
Power Door Locks.....	88
DOT Tire Quality Grading.....	344
Downshifting, 5-speed Manual	
Transmission.....	202
Drive Belt.....	277
Driving.....	197
Economy.....	190
In Bad Weather.....	215
In Foreign Countries.....	347
Driving Guidelines.....	198
Dust and Pollen Filter.....	275

## E

Economy, Fuel.....	190
Emergencies on the Road.....	307
Battery, Jump Starting.....	320
Brake System Indicator.....	329

Changing a Flat Tire.....	308
Charging System Indicator.....	326
Checking the Fuses.....	332
Low Oil Pressure Indicator.....	325
Malfunction Indicator Lamp.....	327
Manually Closing Moonroof.....	330
Overheated Engine.....	323
Emergency Brake.....	82
Emergency Flashers.....	81
Emergency Towing.....	337
Emissions Controls.....	348
Emissions Testing, State.....	351
Engine	
Coolant Temperature Gauge.....	74
Drive Belt.....	277
Engine Speed Limiter.....	203, 208
Malfunction Indicator	
Lamp.....	66, 327
Oil Pressure Indicator.....	66, 325
Oil, What Kind to Use.....	247
Overheating.....	323
Specifications.....	342
Starting.....	200
Ethanol in Gasoline.....	346
Evaporative Emissions Controls..	348
Exhaust Fumes.....	60

Expectant Mothers, Use of Seat	
Belts by.....	21
Exterior, Cleaning the.....	298

## F

Fabric, Cleaning.....	302
Fan, Interior.....	128
Features, Comfort and	
Convenience.....	127
Filling the Fuel Tank.....	185
Filters	
Air Cleaner.....	265
Dust and Pollen.....	275
Oil.....	249
5-speed Manual Transmission	
Checking Fluid Level.....	261
Shifting the.....	202
Flashers, Hazard Warning.....	81
Flat Tire, Changing a.....	308

CONTINUED