

SRS, Additional Information.....	54	Supplemental Restraint		Three Way Catalytic Converter...	350
Additional Safety Precautions....	59	System.....	10, 54	Time, Setting the	144, 162
Airbag Service.....	59	Servicing	59	Tire Chains	284
How the Side Airbag Cutoff		SRS Indicator.....	57, 67	Tire, How to Change a Flat	308
Indicator Light Works	58	System Components.....	54	Tires	278
How the SRS Indicator Works...	57	Synthetic Oil.....	248	Air Pressure	279
How Your Front Airbags				Checking Wear	280
Work.....	54	T		DOT Tire Quality Grading	344
How Your Side Airbags Work....	56	Tachometer	72	Inflation.....	278
SRS Components	54	Tailgate		Inspection	280
SRS Indicator.....	57, 67	Hatch Glass	94	Maintenance.....	280
START (Ignition Key Position)	87	Open Indicator	70	Replacing	282
State Emissions Testing	351	Opening the.....	93	Rotating.....	281
Starting the Engine.....	200	Taillights, Changing Bulbs	290	Snow	283
In Cold Weather at High		Taking Care of the Unexpected ..	307	Specifications	343
Altitude	201	Tape Player	151, 164	Tire Chains.....	284
With a Dead Battery	320	Technical Descriptions		Tools, Tire Changing	308
Steam Coming from Engine	323	DOT Tire Quality Grading	344	Towing	
Steering Wheel		Emissions Control Systems.....	348	A Trailer.....	217
Adjustment	83	Oxygenated Fuels.....	346	Behind a Motorhome	224
Anti-theft Column Lock	87	Three Way Catalytic		Emergency	337
Stereo Sound System	137	Converter.....	350		
Storage Box	119	Temperature Gauge.....	74		
Storing Your Vehicle	295	Tether Anchorage Points	46		
Sunglasses Holder	121	Theft Protection.....	178		