


Seats

Driver's Seat Height Adjustment

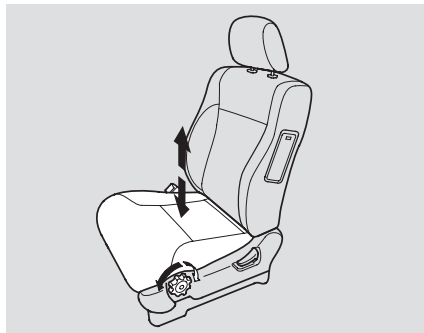

To adjust the height of the driver's seat, turn the dial on the outside of the seat bottom.

Front Seat Armrests



Only on vehicles with an automatic transmission

Each front seat has an armrest on the side of the seat-back. To use it, pivot it down.