


The air cleaner element should be replaced according to the distance recommendation in the maintenance schedule.


### Replacement

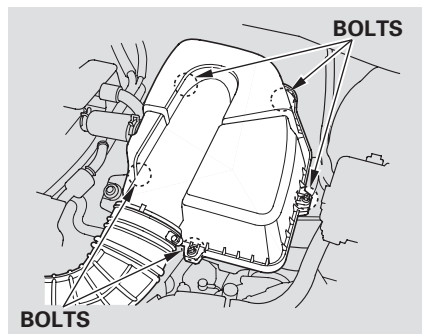

The air cleaner element is inside the air cleaner housing on the left side of the engine compartment.

To replace it:

1. Loosen the five bolts with a Phillips-head screwdriver or a wrench, then lift up the air cleaner housing cover.

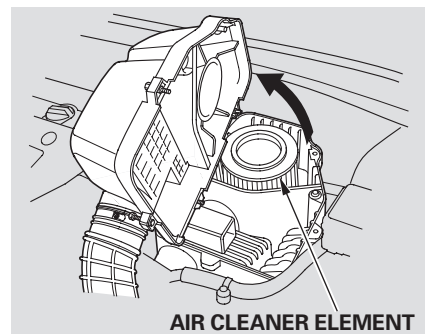

2. Remove the old air cleaner element.
3. Carefully clean the inside of the air cleaner housing with a damp rag.

*CONTINUED*