



Cooling System

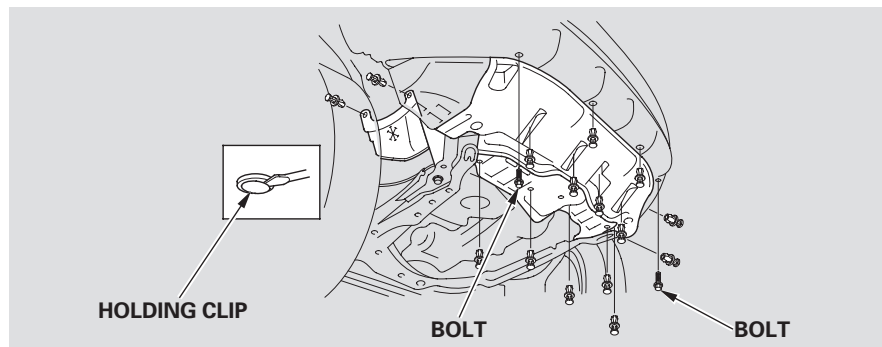

4. Before draining the coolant, remove the cover under the radiator. Use a phillips-head screwdriver to remove the two bolts, and remove the sixteen holding clips from the cover (12 clips on the bottom and 4 clips on the side) with a flat-tipped screwdriver. Then pull the cover down.

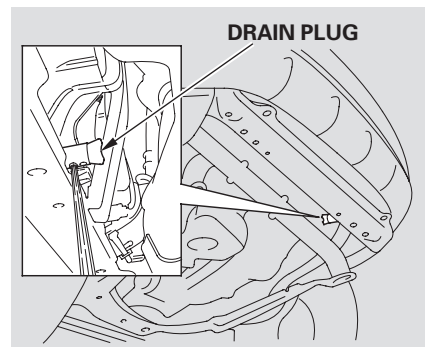

5. Loosen the drain plug on the bottom of the radiator. Drain the coolant into an appropriate container.