

| Service at the indicated distance or time — whichever comes first. | miles x 1,000 | 10 | 20 | 30 | 40 | 50 | 60 | 70 | 80 | 90 | 100 | 110 | 120 |
|---|---|----|----|----|----|----|----|-----|-----|-----|-----|-----|-----|
| | km x 1,000 | 16 | 32 | 48 | 64 | 80 | 96 | 112 | 128 | 144 | 160 | 176 | 192 |
| | months | 12 | | 24 | | 36 | | 48 | | 60 | | 72 | |
| Check engine oil and coolant | Check oil and coolant at each fuel stop | | | | | | | | | | | | |
| Replace engine oil | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● |
| Rotate tires (Check tire inflation and condition at least once per month) | | | | | | | | | | | | | |
| Replace engine oil filter | | | | | | | | | | | | | |
| Inspect front and rear brakes | | | | | | | | | | | | | |
| Check parking brake adjustment | | | | | | | | | | | | | |
| Visually inspect the following items: | | | | | | | | | | | | | |
| Tie rod ends, steering gear box and boots | | | | | | | | | | | | | |
| Suspension components | | | ● | | ● | | ● | | ● | | ● | | ● |
| Driveshaft boots | | | | | | | | | | | | | |
| Brake hoses and lines (including ABS) | | | | | | | | | | | | | |
| All fluid levels and condition of fluids | | | | | | | | | | | | | |
| *Exhaust system | | | | | | | | | | | | | |
| *Fuel lines and connections | | | | | | | | | | | | | |
| Inspect and adjust drive belts | | | | ● | | | ● | | | ● | | | ● |
| Replace dust and pollen filter | | | | | | | | | | | | | |
| Replace transmission fluid | M/T | | | | | | | | | | | | ● |
| | A/T | | | | | | | | | | | | ●* |
| Replace rear differential fluid (4WD) | | | | | | | | | | ● | | | |
| Service the following items at the recommended intervals. | | | | | | | | | | | | | |
| Replace air cleaner element | Every 30,000 miles (48,000 km) | | | | | | | | | | | | |
| Replace spark plugs | Every 110,000 miles (176,000 km) | | | | | | | | | | | | |
| Inspect valve clearance | Inspect every 110,000 miles (176,000 km), otherwise adjust only if noisy | | | | | | | | | | | | |
| Inspect idle speed | Every 160,000 miles (256,000 km) or 8 years | | | | | | | | | | | | |
| Replace engine coolant | At 120,000 miles (192,000 km) or 10 years, then every 60,000 miles (96,000 km) or 5 years | | | | | | | | | | | | |
| Replace brake fluid | Every 3 years (independent of mileage) | | | | | | | | | | | | |

* : Replace at 120,000 miles (192,000 km) or 6 years, then every 90,000 miles (144,000 km) or 5 years.

: See information on maintenance and emissions warranty, last column, page 237 .