

65,000 mi/104,000 km/6-½ yrs	Do item in A.
70,000 mi/112,000 km/4 yrs	Do item in B.
70,000 mi/112,000 km/7 yrs	Do item in A.
75,000 mi/120,000 km	Do item in E.
75,000 mi/120,000 km/7-½ yrs	Do item in A.
80,000 mi/128,000 km/4 yrs	Do items in B, C.
80,000 mi/128,000 km/8 yrs	Do item in A.
85,000 mi/136,000 km/8-½ yrs	Do item in A.
90,000 mi/144,000 km	Do item in E.
90,000 mi/144,000 km/5 yrs	<input type="checkbox"/> Replace transmission fluid (A/T). <input type="checkbox"/> Replace rear differential fluid (4WD). Do items in B, D.
90,000 mi/144,000 km/9 yrs	Do item in A.
95,000 mi/152,000 km/9-½ yrs	Do item in A.
100,000 mi/160,000 km/5 yrs	Do items in B, C.
100,000 mi/160,000 km/10 yrs	Do item in A.
105,000 mi/168,000 km	Do item in E.
105,000 mi/168,000 km/10-½ yrs	Do item in A.
6 yrs	<input type="checkbox"/> Replace brake fluid (independent of mileage).
110,000 mi/176,000 km	<input type="checkbox"/> Inspect valve clearance, cold engine. <input type="checkbox"/> Replace spark plugs.
110,000 mi/176,000 km/6 yrs	Do item in B.
110,000 mi/176,000 km/11 yrs	Do item in A.
115,000 mi/184,000 km/11-½ yrs	Do item in A.
120,000 mi/192,000 km	Do item in E.
120,000 mi/192,000 km/6 yrs	<input type="checkbox"/> Replace transmission fluid (M/T). Do items in B, C, D.
120,000 mi/192,000 km/7 yrs	<input type="checkbox"/> Replace transmission fluid (A/T).
120,000 mi/192,000 km/10 yrs	<input type="checkbox"/> Replace engine coolant, then replace every 60,000mi/96,000km/5yrs.
120,000 mi/192,000 km/12 yrs	Do item in A.
160,000 mi/256,000 km/8 years	<input type="checkbox"/> Inspect idle speed.

* : See dust and pollen filter on page 275 for replacement information under special driving conditions.

: See information on maintenance and emissions warranty, last column, page 237 .

NOTE:

- Check engine oil and coolant at each fuel stop.
- Check and adjust valve clearance, cold engine, only if noisy.